



**EMULADOR INMO  
NISSAN NATS5**

# NISSAN NATS5

## **SUPPORTED MODELS**

**2.2 2.7 diesel 5-socket - 24C04 memory**

**1.5 gasoline Hitachi MEC - 93C46 and 93C56 memory**

**1.8 2.0 Hitachi MEC - 93C56 memory**

**1.4 gasoline Bosch - 24LC02 memory**

**Almera, Almera Tino, Micra, Primera, Terrano**

# NISSAN NATS5

## 2.2 2.7 diesel 5-socket - 24C04 memory

Find **24C04** memory

Write values:

**A5** value from **071** to **073**

**A5** value from **093** to **095**

**A5** value from **096** to **09B**

### Connection of emulator to ECU

**+12V Acc PIN 5.7**

**GND PIN 5.4**

**CODE PIN 4.10**

# NISSAN NATS5

## 2.7 diesel 5-socket - 24C04 memory

In addresses

From **0AC** to **AE** write **A5** values

In **0CF** write **A5** value

From **0D0** to **0D7** write **A5 A5 A5 A5 A5 A5**  
**A5 A5** values

**Connection of emulator to ECU**

**+12V Acc PIN 5.7**

**GND PIN 5.4**

**CODE PIN 4.10**

# NISSAN NATS5

**1.5 gasoline Hitachi MEC - 93C46 and 93C56 memory**

**Find 93C46 memory**  
**From 00E to 00F write A5 A5 or A5 A5**  
**values**

**Connection of emulator to ECU**  
**+12V Acc PIN 43**  
**GND PIN 108**  
**CODE PIN 116 (CORTAR off**  
**from ECU)**

# NISSAN NATS5

**1.5 1.8 2.0 Hitachi MEC - 93C56 memory**

**Find 93C56 eeprom memory**

**In address**

**From 00E to 00F write A5 A5 or A5 A5  
values**

**Connecting emulator to ECU**

**+12Vacc 43 PIN**

**GND 108 PIN**

**CODE 116 PIN (Cut off in ECU)**

# NISSAN NATS5

**1.4 gasoline Bosch - 24LC02 memory**

**Find B58253 eeprom memory – read as 24C02**

**In address**

**From 06 to 07 write A5 A5 values**

**Connection to the ECU**

**+12V Acc 54 PIN**

**GND 6 PIN**

**CODE 88 PIN (Cut off in ECU)**

